

 
How to log into a Compass Chromebook at home

In order to support your children’s learning at home, we have provided you with a Compass Chromebook. This is an excellent tool for easy access to your child’s Google Classroom. It is fast, robust, with really good battery life. A full charge should last all day.


How to get started

As a Chromebook is an internet-connected device, you will need to connect it to your home internet connection before it can be used.


If the Chromebook does not automatically turn on when you open the lid, press the power button on the keyboard. If it still does not turn on, make sure the Chromebook is charged up. You should have received a charger with the Chromebook.

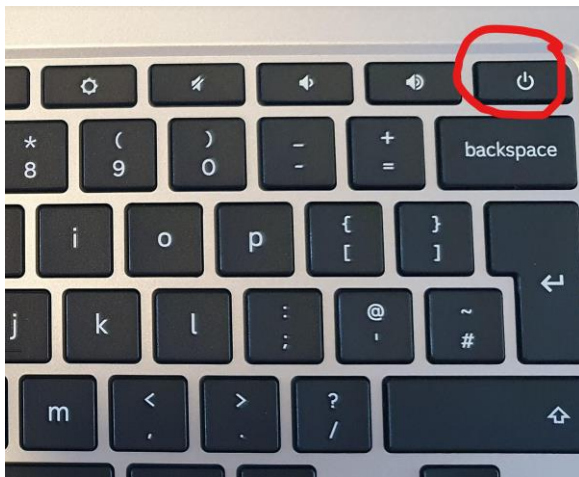

Before attempting to log in, you need to connect it to your home WiFi. Click on the set of icons in the bottom right of the screen.

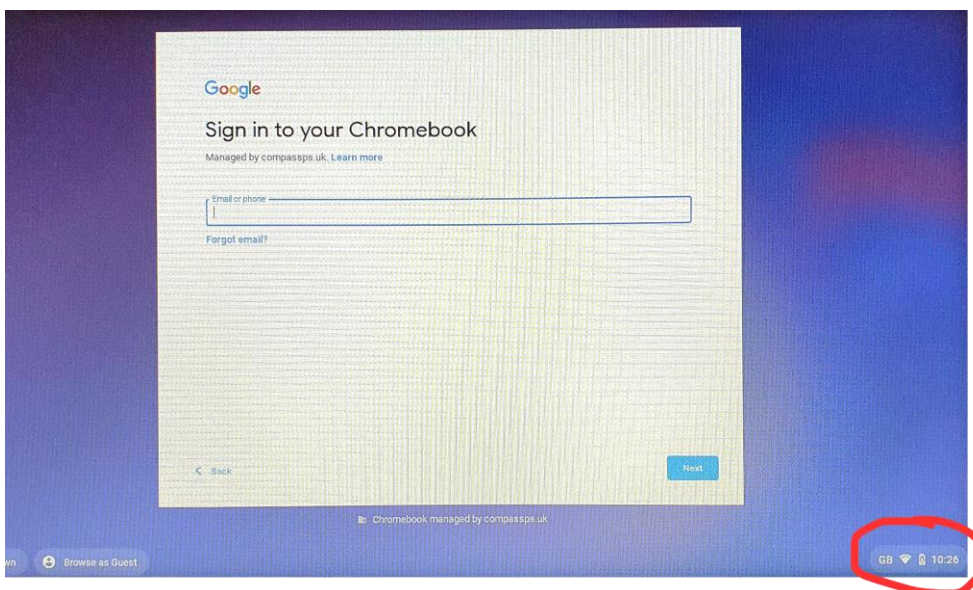

A popup will open. Click on the WiFi options.

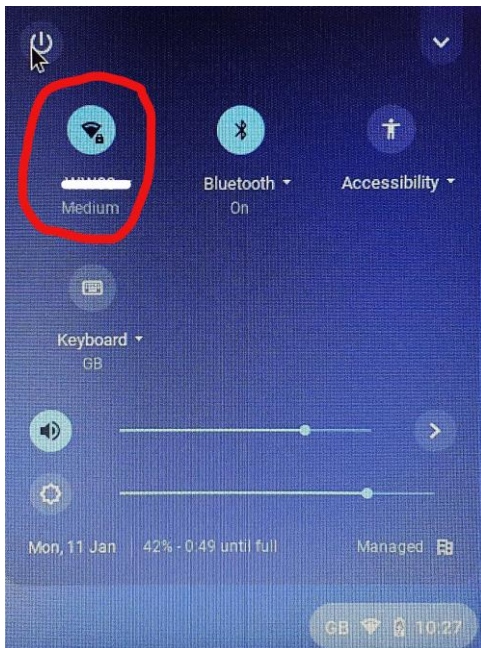

A list of detected WiFi connections will appear. Click on your home WiFi and type in the password. The Chromebook should now indicate that it is connected to the internet.

Once connected to WiFi, sign into the Chromebook with your child's Compass Google Account.

This will automatically sign the device into the entire of your child's Google Account, including Google Classroom.

At the bottom of the screen you will see the tray with common apps, such as the Chrome Browser and Google Classroom. If you click on the circle in the bottom left, and then the up arrow when the tray opens, you will be able to access other apps that are installed on the Chromebook.

